

## Fuel/Air Separators

### Replacement Parts

#### LG50

Part Number	Description
1. <b>RK50007</b>	Spring Kit
2. <b>RK50021</b>	Check Valve Kit
3. <b>RK50009</b>	Check Ball Kit
4. <b>RK50031</b>	Housing Kit
5. <b>RK50052</b>	Flow Diverter Kit
6. <b>RK50002</b>	Straight Hose Fitting Kit (5/8" hose barb)
7. <b>RK50016</b>	Hose Clamp Kit
8. <b>RK50033</b>	Straight Fitting Kit (female 1/2" NPT threads)
9. <b>RK50003</b>	Elbow Fitting Kit (5/8" hose barb)

#### Additional Parts (not shown)

**50017** Installation Instructions

